Vast EX Grazer Power Arm Installation Instructions


Warnings and Safety

- Please verify the contents of the package!
- Please read instructions before starting the installation.
- Make sure power is off before installing or modifying the system.
- Call Tivoli LLC tech support with any questions.
- This product is designed to work with clean 100-277V AC power only. Use of any other power source will cause damage, shorten the life of the fixture and will void the warranty. It is the manufacturer's recommendation to assure a cumulative leakage current of less than 3.5mA on the control unit.
- **Warning:** With any luminaire for any application, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injuries
- **THIS LIGHTING SYSTEM MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
- **CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.**
- **WARNING!** Risk of Electrical Shock.
- Disconnect power before installing, wiring or servicing fixtures. Fixture has no user-serviceable parts. Do not open fixture compartments, except as noted in this document. Do not apply paint, lubricants or other coatings to fixture, suspension cables or fasteners.
- Pour éviter les risques de chocs électriques, débranchez l'alimentation avant l'installation, le câblage ou l'entretien des luminaires. Le luminaire ne comprend aucun élement réparable par l'utilisateur. N'ouvrez pas les compartiments du luminaire, sauf indication contraire dans ce document. N'appliquez pas de peinture, de lubrifiants ou d'autres revêtements sur le luminaire, les câbles de suspension our les attaches.


VASTGZEX-PWRARM-XXX-01 Instructions

NOTE: For 4ft fixtures, 2x Power Arms are needed.


1. Mount the Arm to wall. Power cord can be along or through wall. (Bolts not provided)

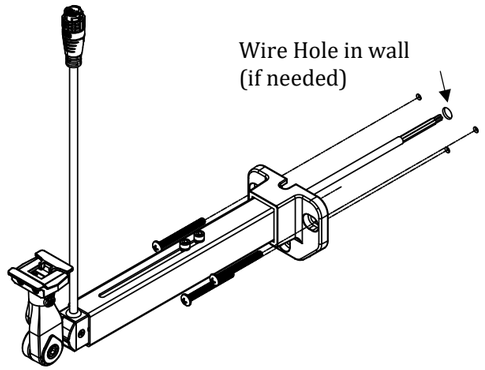


   a. Can be mounted to the wall in many different orientations depending on wireway or light direction needed.

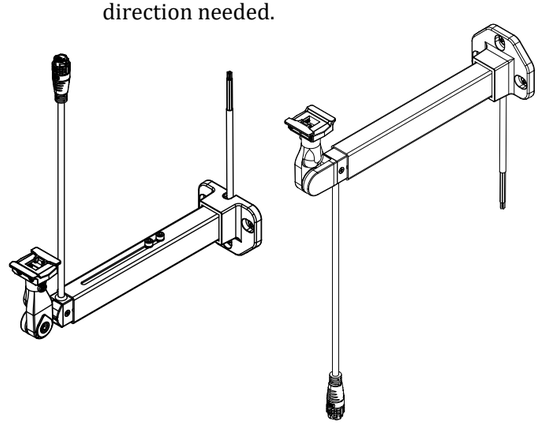


NOTE: Power Legs can be removed on VAST EX for a cleaner look on Power Arm.

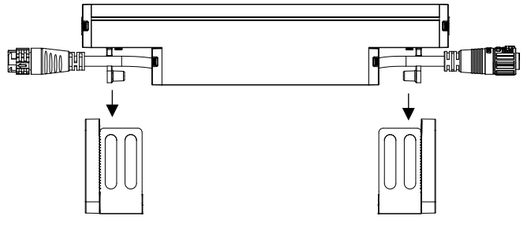


NOTE: Power Cord can be removed if not needed. To remove, pull cord on connector side through arm.

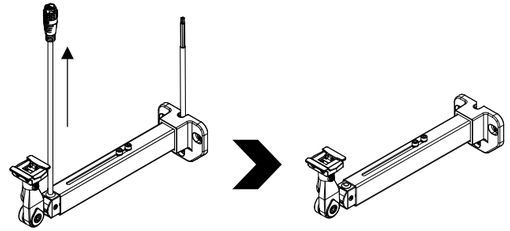


2. Use Hex Tool to adjust length and angle of Power Arm to your desired orientation and position.

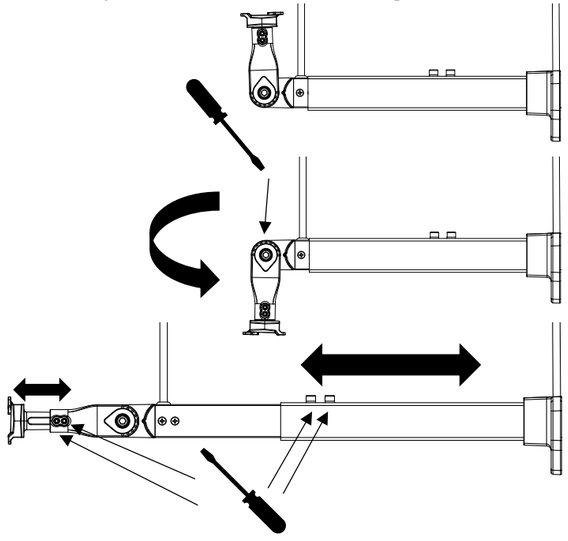

3. Mount the Vast EX to Power Arm.
   a. Use Hex Tool to loosen screws to move locking bracket.

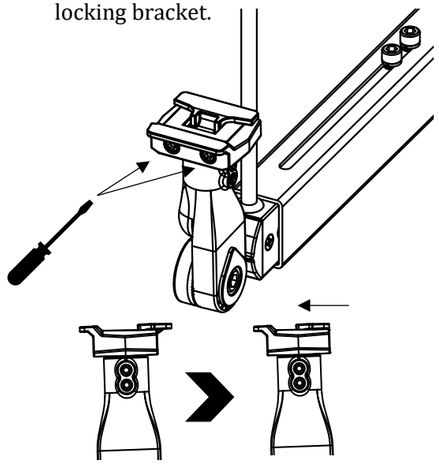


   b. Line up back of Vast EX to Power Arm bracket and insert into Vast EX back slot.

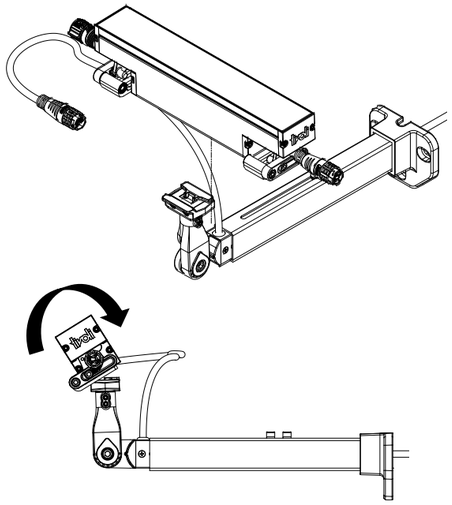

   c. Tighten Hex screws such that bracket locks into the back of Vast EX slot.

4. Connect Power to Vast EX and Power Arm.

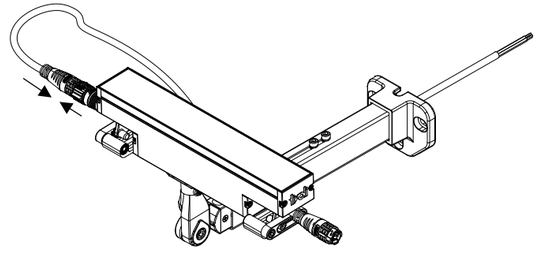

Wire Labels	
Vast EX Grazer Static	Vast EX Grazer Palette
Black = Line White = Neutral Green = Ground Purple = 0-10V+ Pink = 0-10V- Yellow = Unused	Black = Line White = Neutral Green = Ground Purple = DMX+ Pink = DMX- Yellow = Ground

Tivoli, LLC. reserves the right to modify this specification without prior notice
Copyright © 2024 Tivoli