Recessed Urban Extrusion Installation Instruction

Warnings and Safety

- Please verify the contents of the package!
- Please read instructions before starting the installation.
- Make sure the power is off before installing or modifying the system.
- Call Tivoli LLC tech support with any questions.
- This product is designed to work with listed Class 2, 24V DC transformers only. Use of any other power source will cause damage, shorten the life of the fixture, and will void the warranty.
- Consult any local and national codes for installation.
- Follow basic safety precautions when dealing with any luminaire application to reduce the risk of fire, electrical shock, and/or personal injuries. This lighting system should be installed by a certified professional.

- **Do not** use this product for other than its intended use.
- **Do not** install this lighting system where the exposed bare contacts can be shorted or contact any conductive material to reduce the risk of fire and burns.
- **Do not** use any luminaire if damaged, such as a broken globe, loose connections, or frayed wire insulation. Inspect periodically.
- **Do not** secure any luminaire with staples, nails or like means that might damage the wire insulation.
- **Do not** cover lamps with cloth, paper or any material that is not part of the product.


Tivoli, LLC. reserves the right to modify this specification without prior notice
Copyright © 2023 Tivoli

Recessed Urban Extrusion Installation Instruction


1. Refer to the specification sheet for different extrusion options.

NOTE: The images below are only for reference and the extrusion, lens, and end caps will vary by order.

2. Measure and cut the extrusion to the desired length (keeping in mind cut increment of LED tape).
3. Ensure the extrusion surface of LED channel is smooth, clean, and free from dirt, oil, and debris.
4. Peel off the adhesive backing from LED tape and apply to the mounting surface.

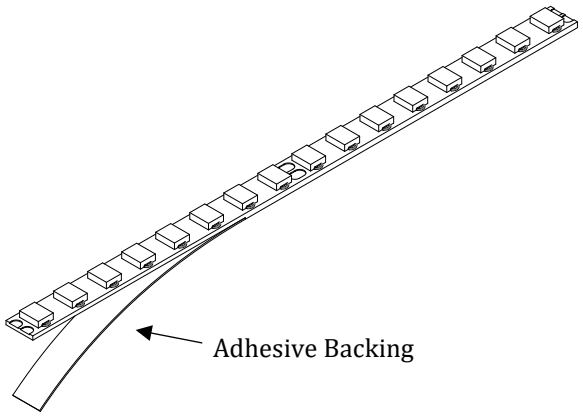

5. Press firmly along the length of the tape to ensure strong adhesion to the mounting surface.
   NOTE: Do not attempt to remove the tape after it has adhered to the surface. In the event of an incorrect application, remove the tape, clean the mounting surface, and reapply with a new piece of tape.
6. Add endcaps to housing and feed LED power leads through endcap with powerfeed hole.
7. Install extrusion lens.

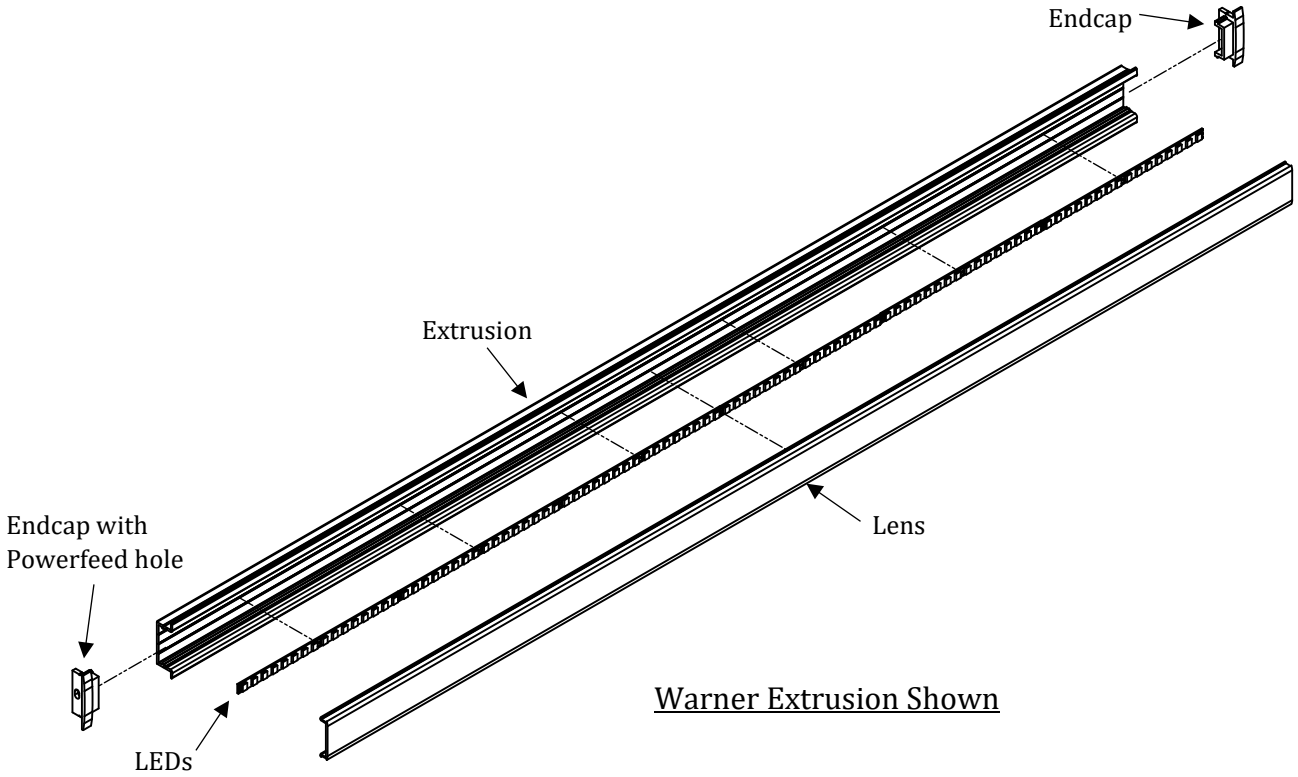


Warner Extrusion Shown


Tivoli, LLC. reserves the right to modify this specification without prior notice
Copyright © 2023 Tivoli

Recessed Urban Extrusion Installation Instruction

8. Cut opening in wall according to the drawing layout and dimensions of the extrusion.
9. Connect the power lead to appropriate 24V DC power supply.
10. Insert extrusion into wall opening.

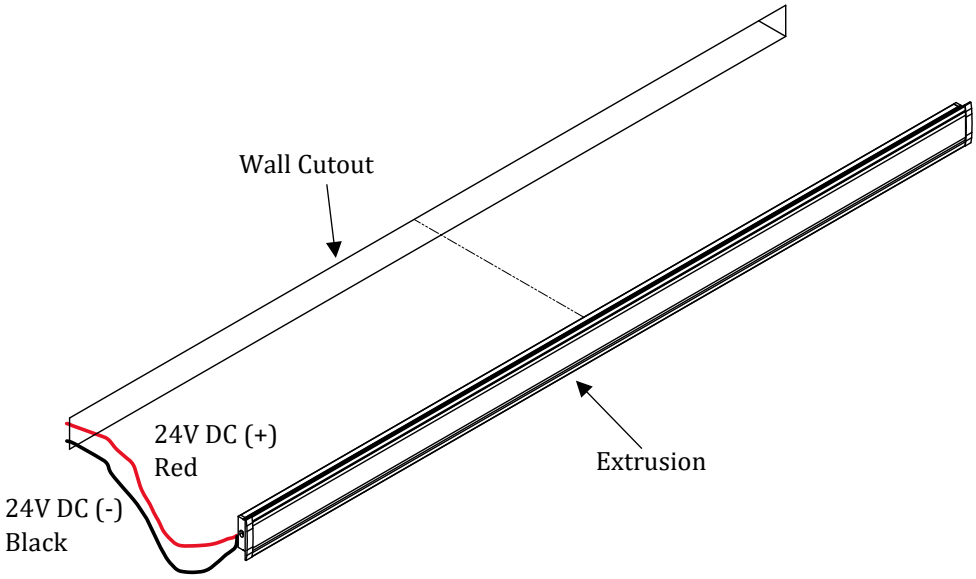

11. Apply adhesive to the underside of the extrusion trim, insert the extrusion in the cutout, and press firmly along the length of the extrusion to ensure adhesion to the mounting surface.

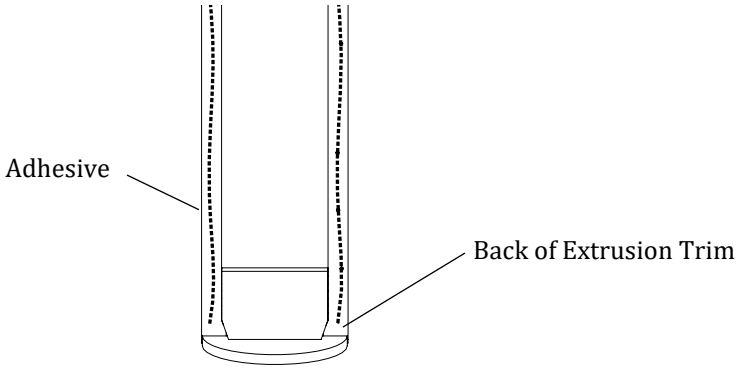

Tivoli, LLC. reserves the right to modify this specification without prior notice
Copyright © 2023 Tivoli